

AGP-8-OR Parallel Gripper

8-Finger Gripper for Placing O-Rings, T-Slot Bearing Series



FEATURES AND BENEFITS

- Jaws are T-Slot bearing supported to prevent jaw breakage and offer superior load bearing performance.
- Spreading jaws and Ejector jaws have independent pistons to provide exact timing of O-ring placement.
- Compact design with long adjustable stroke.
- True parallel jaw motion for easy tooling.
- Hole through center facilitates part seating and ejection.
- Available in Imperial only.

SPECIFICATIONS

Design: Parallel, Double Acting, Synchronized Sealed Jaws

Stroke: Spread 1.10 in. adj. [27.9 mm] **Ejecting** 0.55 in [13.9 mm]

Gripping Force Per Jaw @ 80 PSI [5.5 BAR] Spreading Jaw: 200 lbs [889 N] 310 lbs [1378 N] Ejector Jaw:

Time:

Close: 0.2 sec [0.2 sec] 0.2 sec [0.2 sec] Open:

Pressure Range:

30-100 PSI [2-7 BAR] Low/High

Temperature Range:

Low/High -20°/180°F [-28°/80°C] Side Play: [.03 mm] ± 0.001

Repeatability from center:

±.002 [.06 mm]

Loading Capacity:

Static **Dynamic** Max Tensile T 100 lbs 30 lbs [445 N] [130 N] Max Compressive C 100 lbs 30 lbs [445 N] [130 N] 200 in/lb 50 in/lb Max Moment M_x [22 Nm] [6 Nm] Max Moment Mv 230 in/lb 60 in/lb [23 Nm] [6 Nm] 200 in/lb Max Moment M₇ 50 in/lb [22 Nm] [6 Nm]

Material: High Strength, Hard Coated aluminum bronze alloys, Steel

8 lbs [3.6 Kg] Weight:


January 2009 - PATENTED Made in the USA

HOLDING FORCES CHART

WARNING! MAXIMUM FINGER LENGTHS 200 SON 150-100-50-25-**INCHES**


WARNING! Do not exceed tooling jaw length. See Chart above.

LOADING INFORMATION

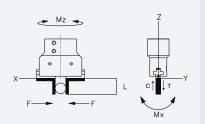

LOOK! More Technical specifications for sensors on "Sensors Accessories" page.

HOW TO ORDER

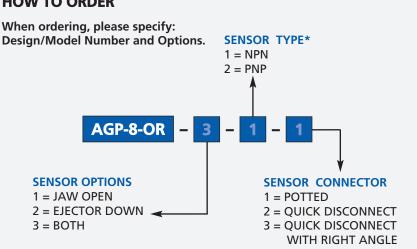


* NOTE: Proximity sensors are 6.5 mm smooth barrel, 12-30 VDC, 50 mA and comes with 2 meter cable.

Sensor Part # SNC06, SNQ06, SPC06, SPQ06



AGP-8-OR Parallel Gripper 8-Finger Gripper for Placing O-Rings, T-Slot Bearing Series

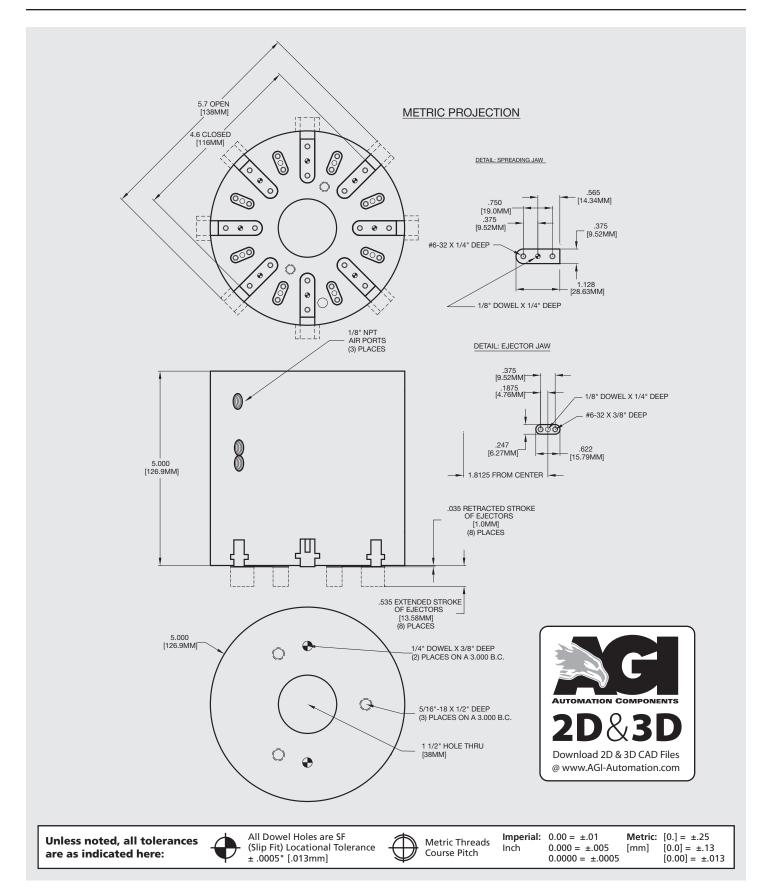



AGP-8-OR Parallel Gripper

8-Finger Gripper for Placing O-Rings, T-Slot Bearing Series


Basic operating instructions


- 1 Eject air port
- 2 Jaw close air port
- 3 Jaw open air port
- 5 Stroke adjustment screw
- 6 Adjustment screw lock

To adjust stroke, first loosen adjustment screw locks [marked #6] 2 places. Next, drive adjustment screws [marked #5] down to shorten stroke or back out to lengthen. Adjust both screws equally. Complete the adjustment by locking both (#6) adjustment screw locks.





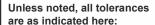

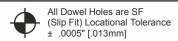



Imperial: $0.00 = \pm .01$ $0.000 = \pm .005$ $0.0000 = \pm$ **Metric:** $[0.] = \pm .25$ [mm] $[0.0] = \pm .13$

 $[0.00] = \pm .013$